


EasyShoe Performance N/G Size Chart

EasyShoe Performance N/G		
Size	Width in mm	Length in mm
0	105-111mm	108-115mm
1	112-119mm	116-123mm
2	120-127mm	124-131mm
3	128-135mm	132-140mm
4	136-143mm	141-149mm
5	144-152mm	150-159mm

Important instructions for measuring for EasyCare® products:

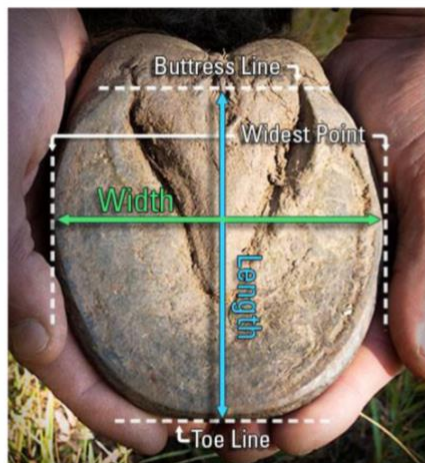

1. After a fresh trim, measure the width of the hoof across the bottom at the widest point.
2. Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel where the hoof wall ends. Do not include the heel bulbs in the measurement.
3. Compare your measurement with the appropriate size chart. Please note that each boot style has its own unique size chart.
4. Ideally, the length and width measurement will fit into the same size. If the length and width measurements indicate different sizes, select the larger size. If the width and length measurements are different by more than one size, your selected boot style is not recommended.* Be sure to check your measurements against an alternative boot in the EasyCare® line - another style may accommodate your horse's hoof shape better.

***Note: If you are fitting an Easyboot® Glue-On, width and length must fall into the same size category.**